


Auto Tray installation



Install the Auto Tray on the back side of the SBOT9.

Adjust the legs until the Auto Tray is level and aligned to the same height as the SBOT9.

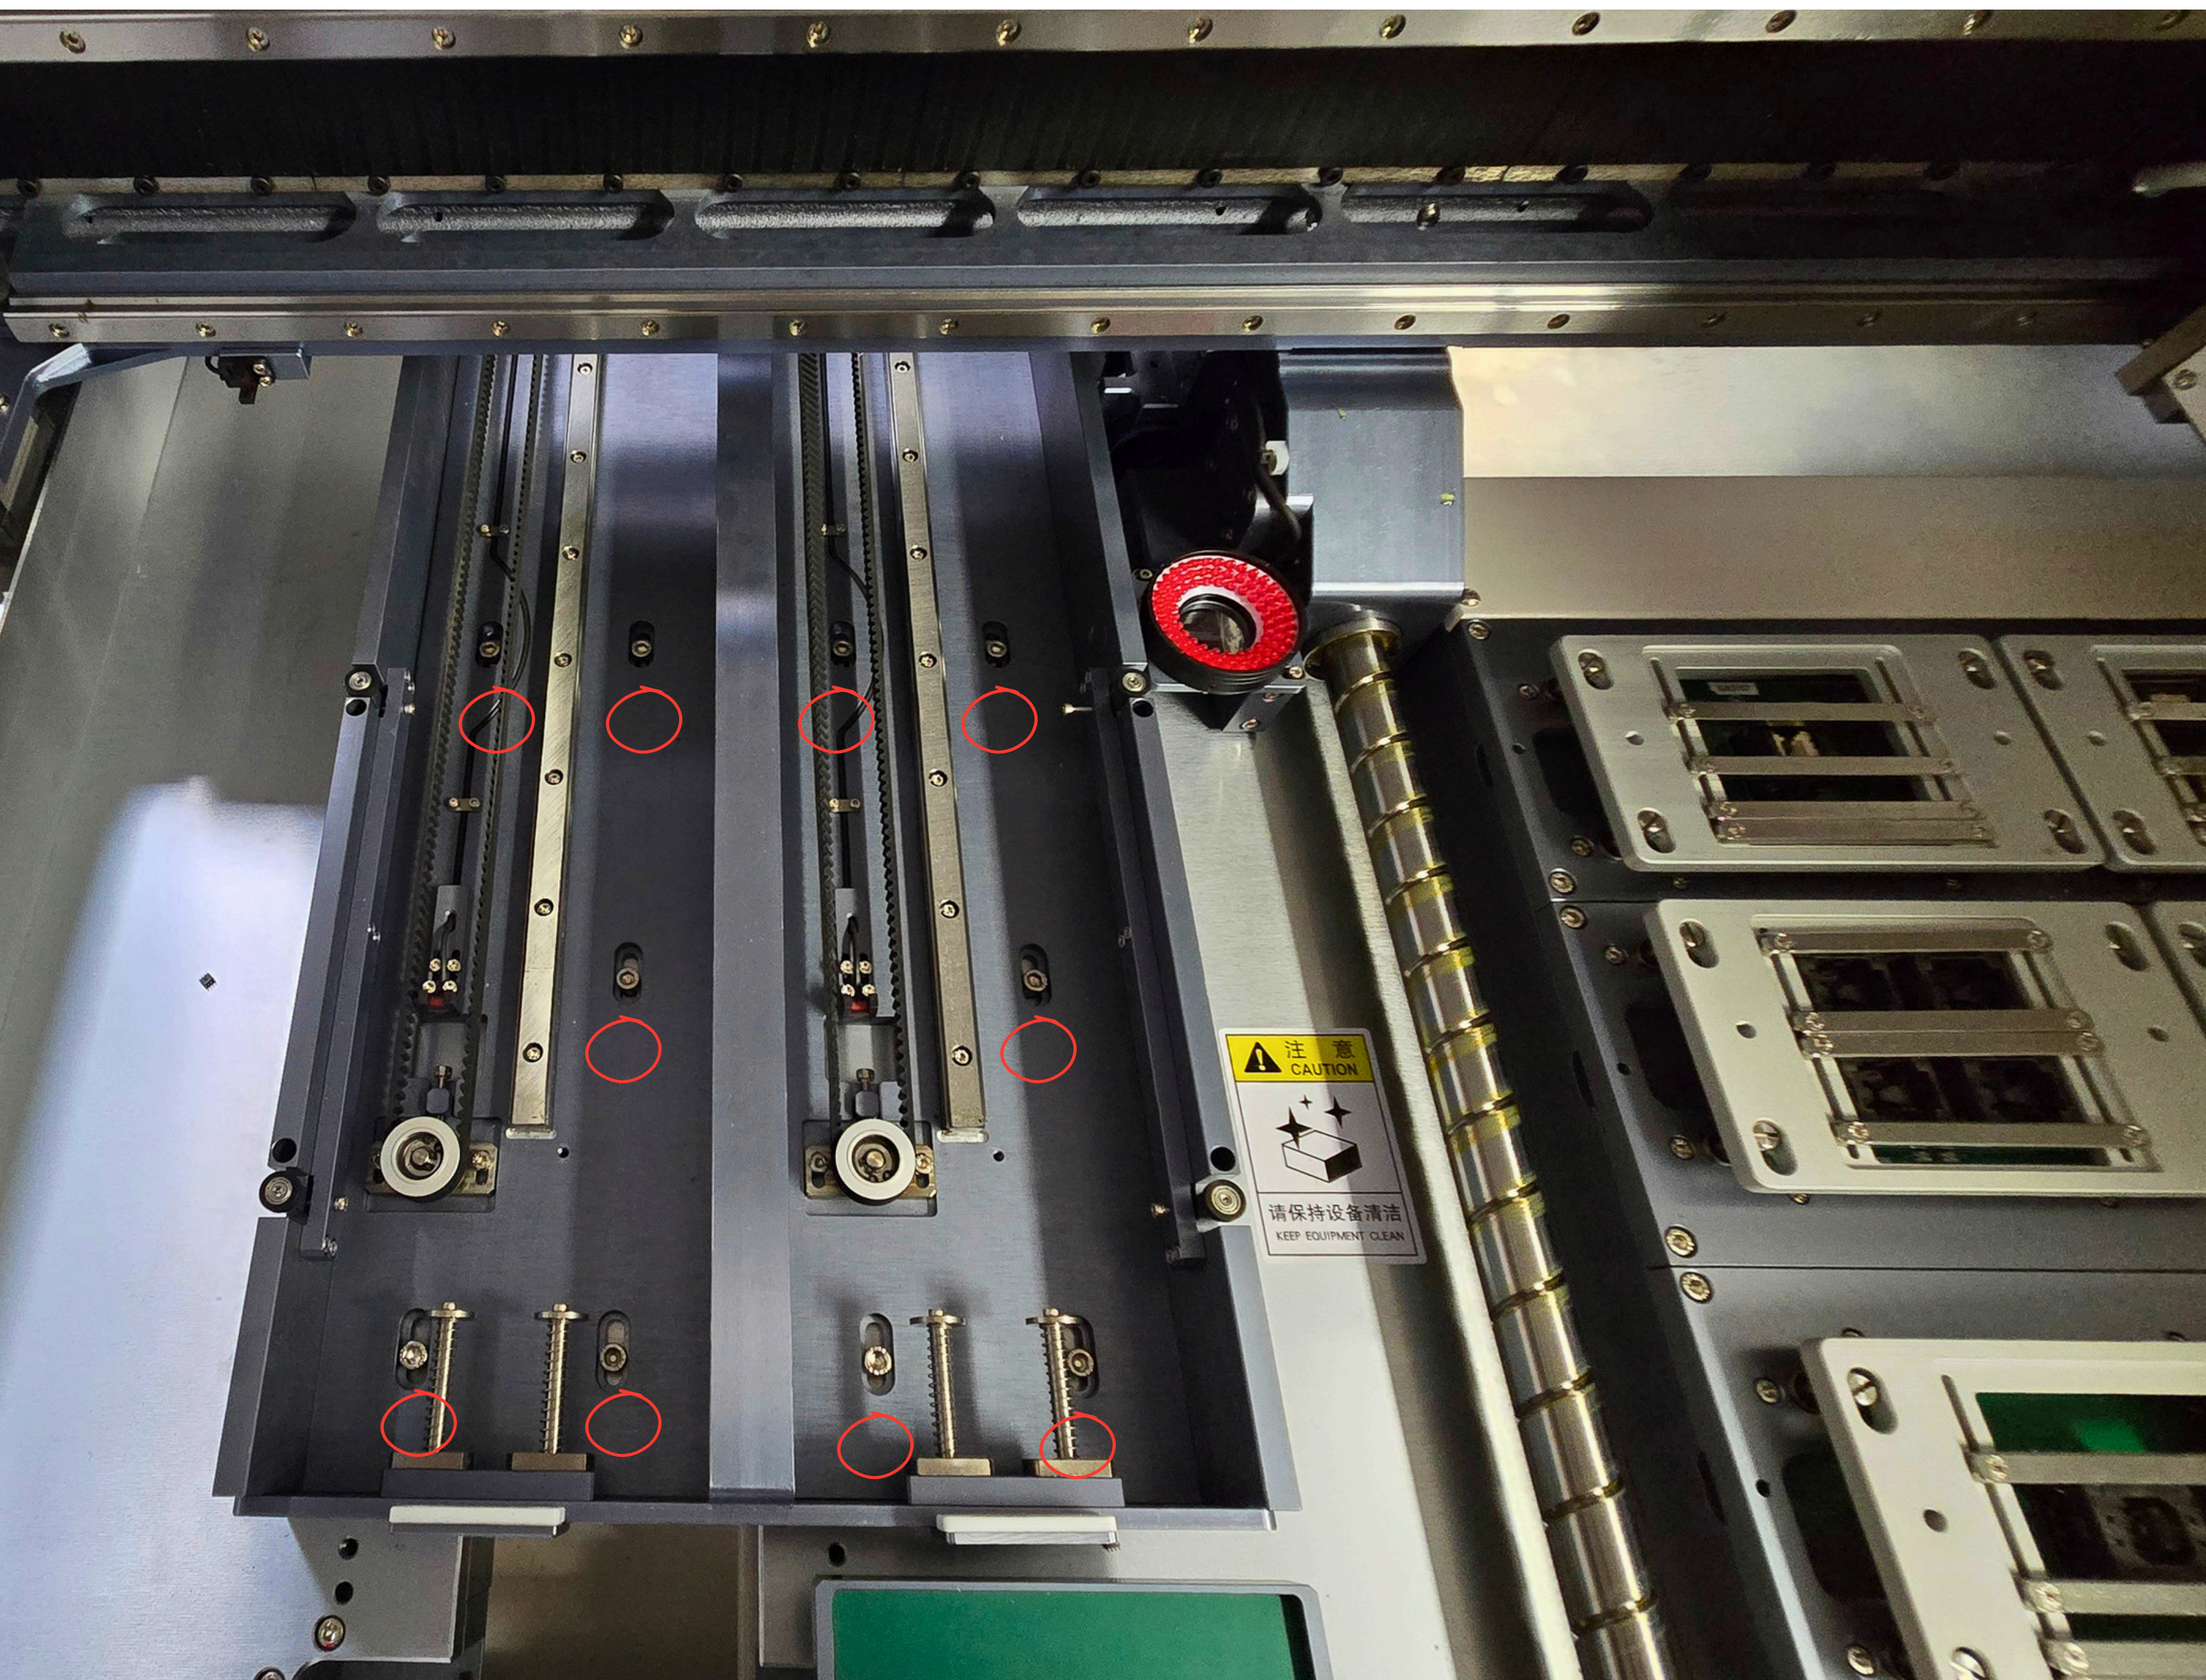

**After inserting the Auto Tray, align the mounting points with the screw holes.
Secure the Auto Tray using all 10 bolts.**



Auto Tray Cables and Air Hose

Connect the following items to the Auto Tray:

Serial Port

Power Cable

Air Hose

All cables and ports are labeled.

Use the air hose located on the rear of the SBOT9 labeled “Auto Tray Air Tube.”



Login Information

- 1. Select Admin.**
- 2. Enter the password: AAABBB.**
- 3. Click Enter.**
- 4. Click Enter System.**

Use “Click Enter System” to access the system.