



Installation Summary - SuperBOT 9 Tape out handler

- 1. Power off the SBOT9 before installation.**
- 2. Position the tape out handler at the front-left side of the SBOT9.**
- 3. Slide the handler into the metal mounting plate.**
- 4. Adjust the leveling feet until the handler height matches the SBOT9 installation height.**
- 5. Secure the handler using the two screws on the left side.**
- 6. Connect the tape out serial cable, power cable, and air hose.**
- 7. Power on the system and verify communication with the handler.**
- 8. Log in using the authorized service account credentials.**

Safety/preparation steps

- Power off the SBOT9 before installation.**
- Disconnect or depressurize air before connecting the air hose.**
- Confirm the machine is level and stable before securing the handler.**


Warning: Avoid pinching cables or hoses during installation.

Log in information:

Select “admin”

Password: AAABBB

Install the tape-out handler on the front-left side of the SBOT9.

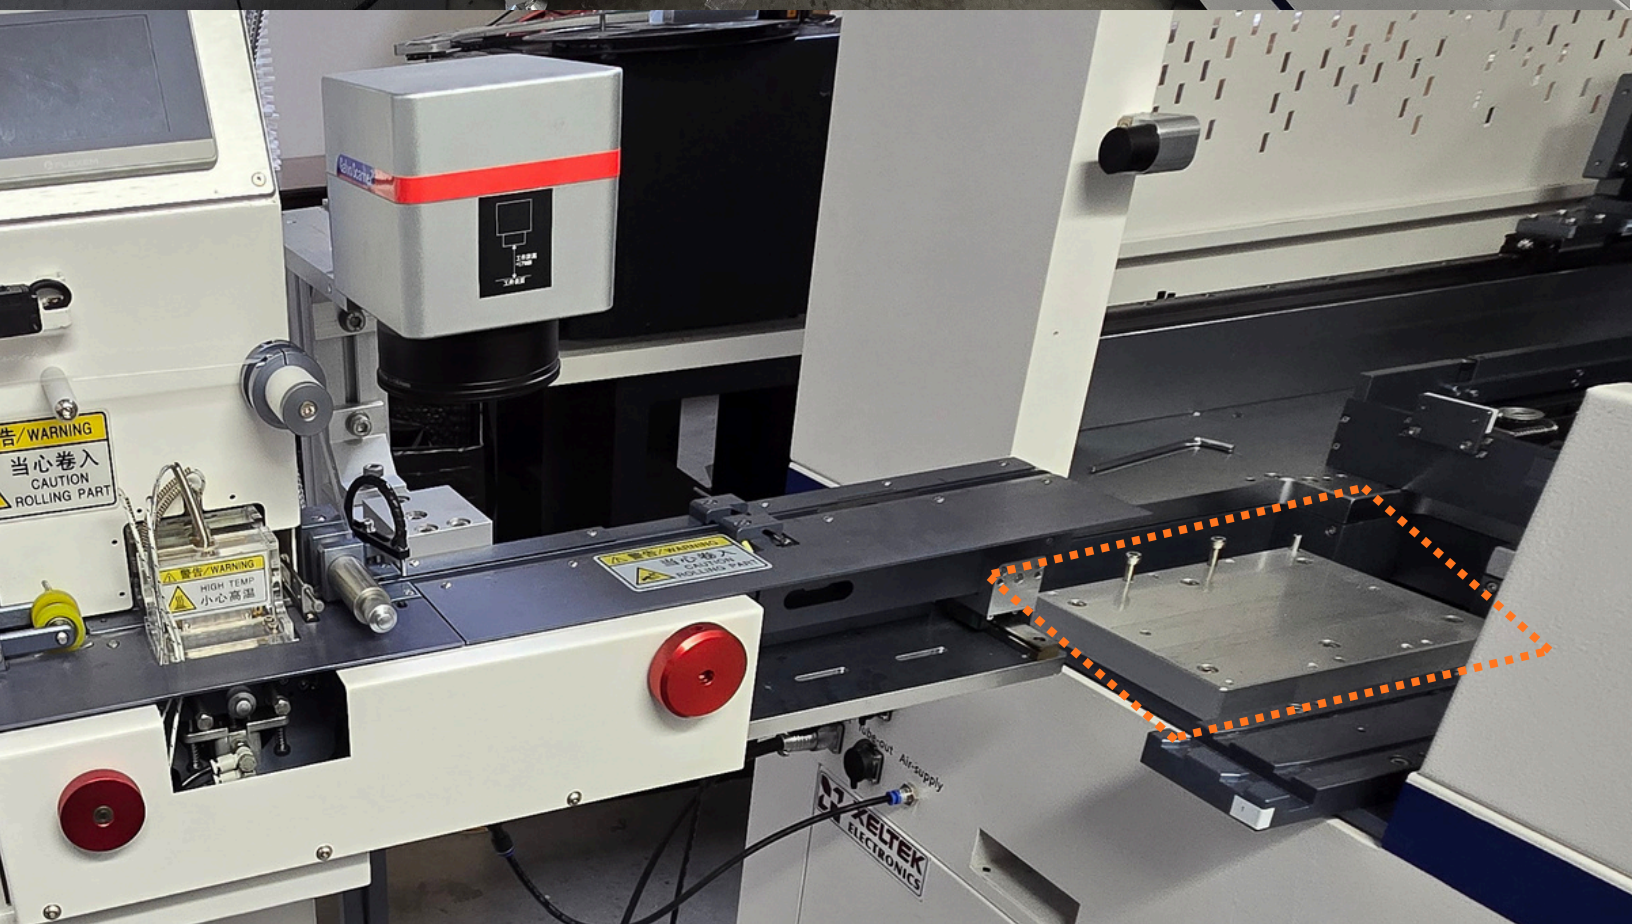


Slide the handler into the metal mounting plate.

Adjust the leveling feet until the handler height matches the SBOT9 installation height.



The handler is secured with two screws.

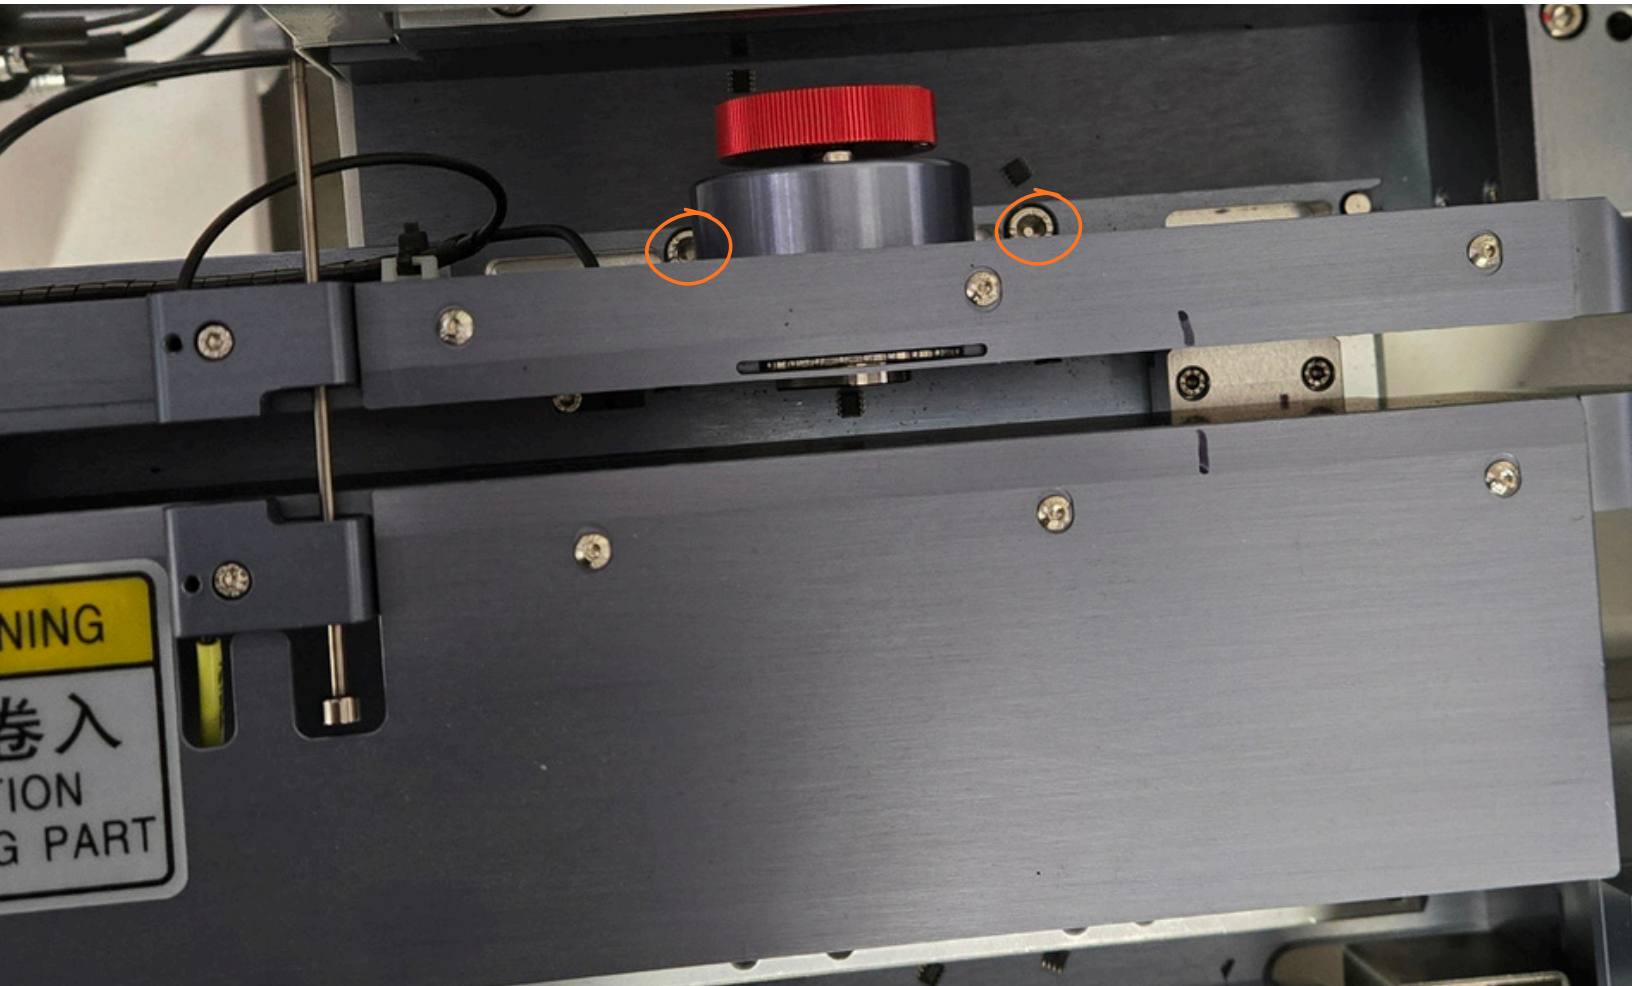

Connect the tape out serial cable, power cable, and air hose.

